
Thankful Tray Instructions

Tools Required: Saw, Sandpaper (150 grit), Drill, ¼" Drill Bit, Philips Screwdriver, Butane Torch, Stencils (Thankful/Blessed)


Materials Required:

- 1" x 6" Board Stock
- Spray Lacquer
- (1-1/4" Wood Screw) x4
- (3" Metal Handle) x2
- 1. Using a saw cut one piece of board stock 16" long, and cut two pieces 1-1/2" long
- 2. Drill four holes in the 16" long piece

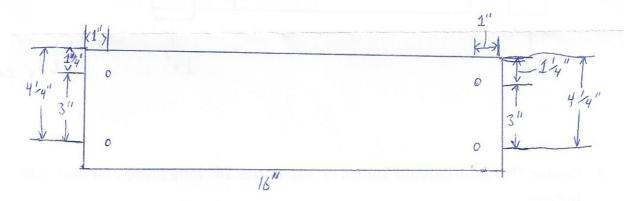

Not to scale


3. Drill two holes in each of the 1-1/2" long piece

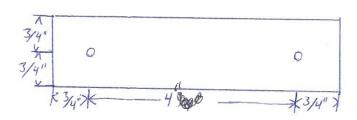

X2

Not to scalle

4. Screw each 1-1/2" long piece 1-1/2" from each end of the 16" board

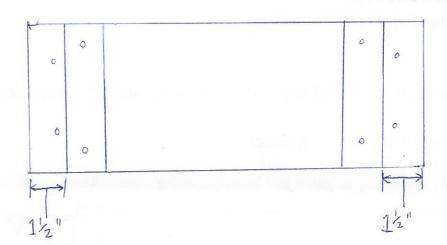

Not to saale

5. Center Thankful/Blessed Stencil on top of the 16" long piece and burn with Butane

Torch

- Use screwdriver to hold down stencil while burning
- 6. Spray piece with lacquer to seal burnt text
- 7. Once the lacquer is dry attach 3" metal handles